


WORTH ONE DEPARTURE
(WORTH1.TTT) 25JAN24

MESQUITE, TEXAS
MESQUITE METRO (HQZ)

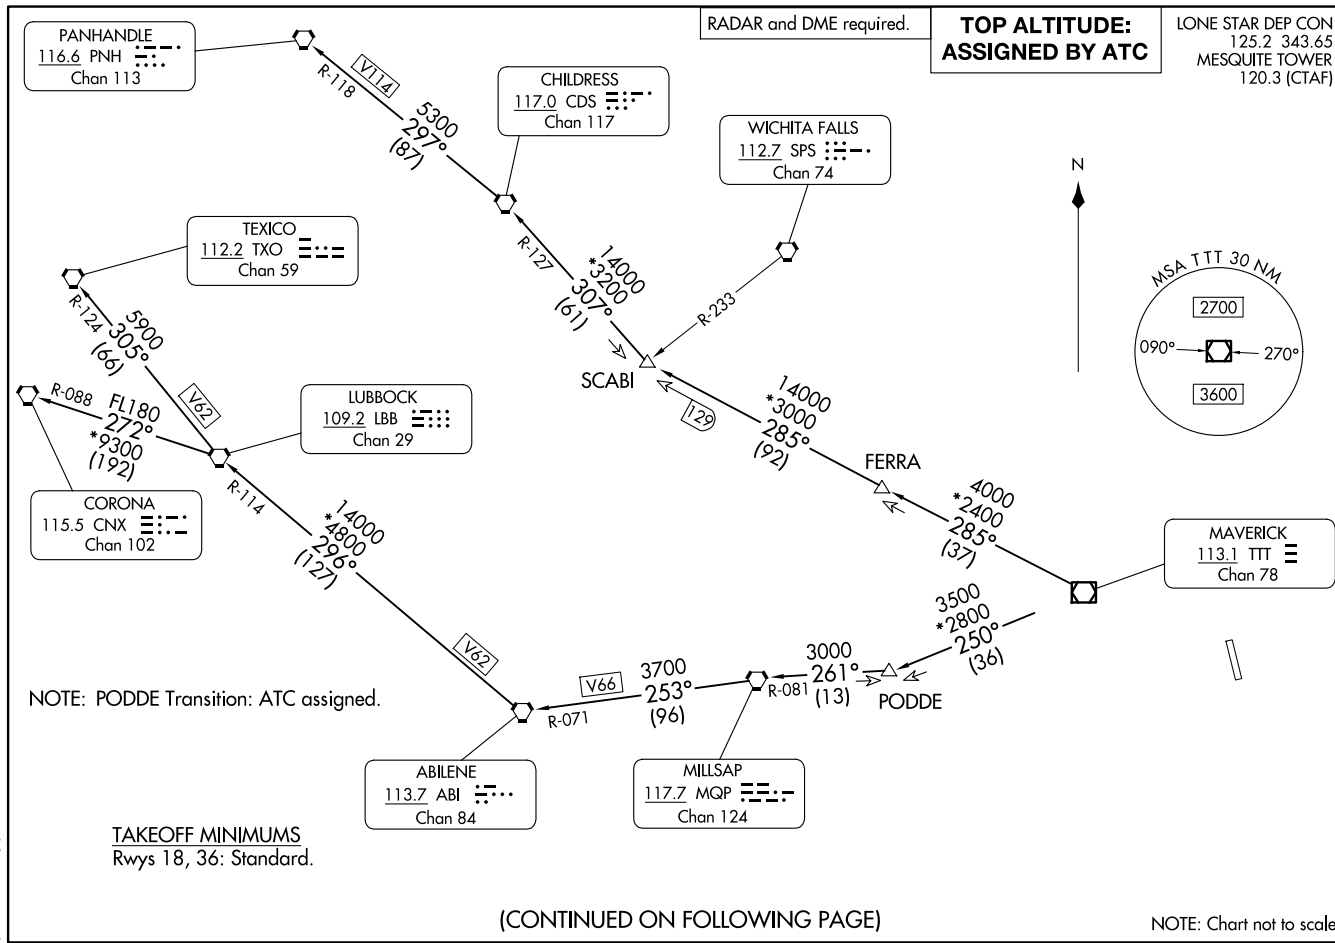

(CONTINUED ON FOLLOWING PAGE)

WORTH ONE DEPARTURE
(WORTH1.TTT) 24305

AL-6444 (FAA)

MESQUITE METRO (HQZ)
MESQUITE, TEXAS

▼	DEPARTURE ROUTE DESCRIPTION
	When entering controlled airspace, fly assigned heading for RADAR vectors to appropriate route. Maintain ATC assigned altitude. <u>ABILENE TRANSITION (WORTH1.ABI)</u>: From over TTT VOR/DME on TTT R-250 to PODDE, then on MQP R-081 to MQP VORTAC, then on MQP R-253 and ABI R-071 to ABI VORTAC. <u>CHILDRESS TRANSITION (WORTH1.CDS)</u>: From over TTT VOR/DME on TTT R-285 to SCABI, then on CDS R-127 to CDS VORTAC. <u>CORONA TRANSITION (WORTH1.CNX)</u>: From over TTT VOR/DME on TTT R-250 to PODDE, then on MQP R-081 to MQP VORTAC, then on MQP R-253 and ABI R-071 to ABI VORTAC, then on ABI R-296 and LBB R-114 to LBB VORTAC, then on LBB R-272 and CNX R-088 to CNX VORTAC. <u>LUBBOCK TRANSITION (WORTH1.LBB)</u>: From over TTT VOR/DME on TTT R-250 to PODDE, then on MQP R-081 to MQP VORTAC, then on MQP R-253 and ABI R-071 to ABI VORTAC, then on ABI R-296 and LBB R-114 to LBB VORTAC. <u>PANHANDLE TRANSITION (WORTH1.PNH)</u>: From over TTT VOR/DME on TTT R-285 to SCABI, then on CDS R-127 to CDS VORTAC, then on CDS R-297 and PNH R-118 to PNH VORTAC. <u>PODDE TRANSITION (WORTH1.PODDE)</u>: From over TTT VOR/DME on TTT R-250 to PODDE. <u>TEXICO TRANSITION (WORTH1.TXO)</u>: From over TTT VOR/DME on TTT R-250 to PODDE, then on MQP R-081 to MQP VORTAC, then on MQP R-253 and ABI R-071 to ABI VORTAC, then on ABI R-296 and LBB R-114 to LBB VORTAC, then on LBB R-305 and TXO R-124 to TXO VORTAC.