

**TOP ALTITUDE:
 ASSIGNED BY ATC**

RADAR required.
 DME required for IMPERIAL and THERMAL transitions.

MSA ELB 25 NM

6900

PALM SPRINGS
 115.5 PSP : : : :
 Chan 102

RIVERSIDE
 108.6 RAL : : : :
 Chan 59

PARADISE
 112.2 PDZ : : : :
 Chan 59

SOCAL DEP CON
 133.85 346.35
 D-ATIS
 126.0
 CLINC DEL
 118.0
 GND CON
 120.8

EL TORO
 117.2 ELB : : : :
 Chan 119

THERMAL
 116.2 TRM : : : :
 Chan 109

JULIAN
 113.75 JU : : : :
 Chan 84(Y)

MISSION BAY
 117.8 MZB : : : :
 Chan 125

OCEANSIDE
 115.3 OCN : : : :
 Chan 100

SANTA CATALINA
 114.15 SXC : : : :
 Chan 88(Y)


TAKEOFF MINIMUMS

Rwy 2L: Standard with minimum climb of
 385' per NM to 5600.

NOTE: Restricted to turbojet and turboprop aircraft only.

NOTE: Chart not to scale.

(CONTINUED ON FOLLOWING PAGE)

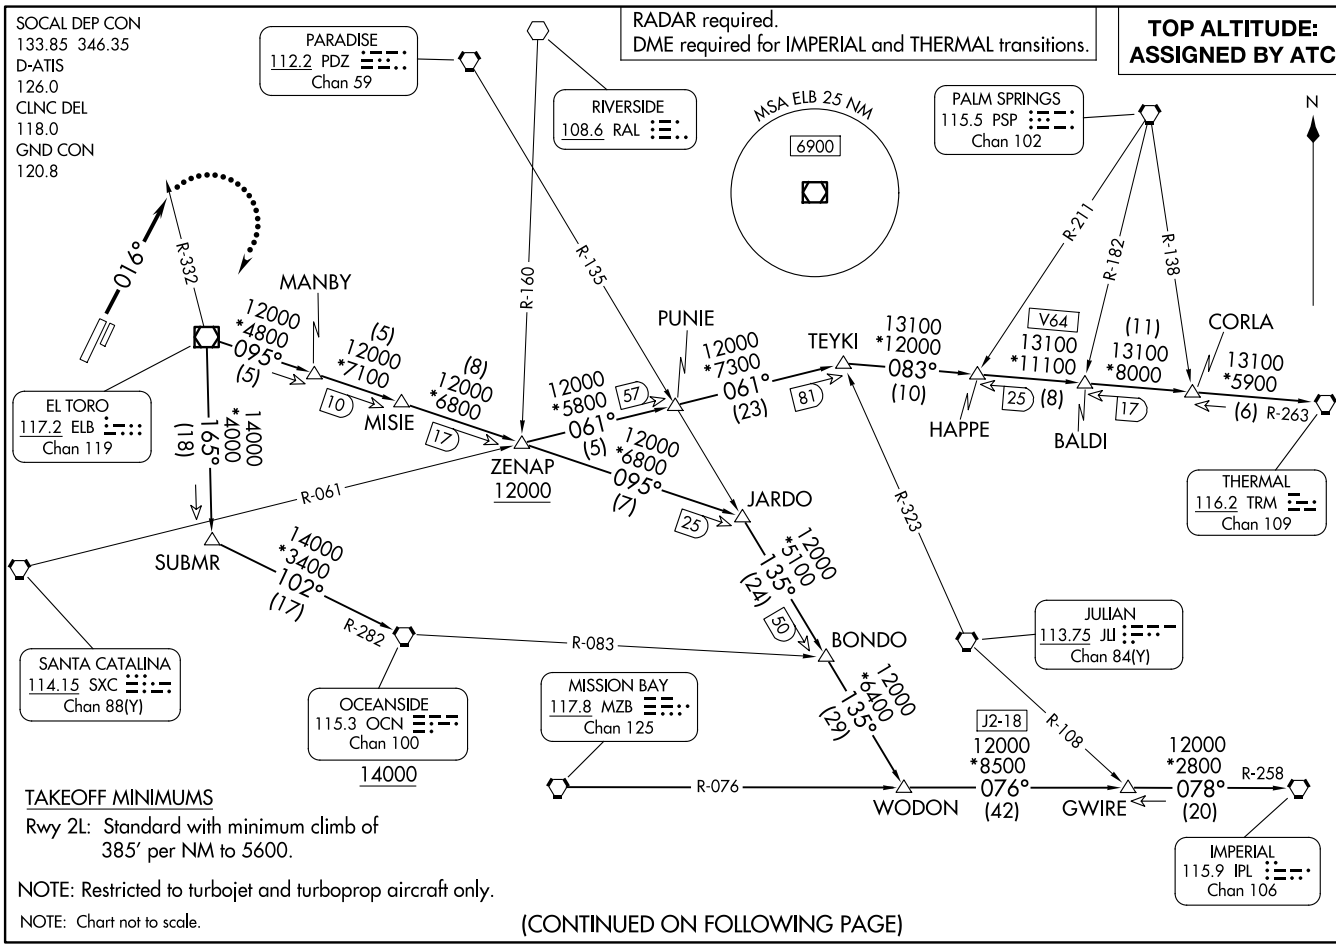



DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 2L: Climb on heading 016° for RADAR vectors to ELB VOR/DME, thence

. . . .(transition) or (assigned route). Maintain ATC assigned altitude. Expect filed altitude ten minutes after departure.

LOST COMMUNICATIONS: If not in contact with departure control by ELB R-332, turn right direct ELB VOR/DME, climb to 7000 and proceed on assigned transition or route. Climb to filed altitude ten minutes after departure.

IMPERIAL TRANSITION (ELB5.IPL): From over ELB VOR/DME on ELB R-095 to JARDO, then on PDZ R-135 to WODON, then on MZB R-076 and IPL R-258 to GWIRE, then on IPL R-258 to IPL VORTAC.

OCEANSIDE TRANSITION (ELB5.OCN): From over ELB VOR/DME on ELB R-165 to SUBMR, then on OCN R-282 to OCN VORTAC.

THERMAL TRANSITION (ELB5.TRM): From over ELB VOR/DME on ELB R-095 to ZENAP, then on SXC R-061 to TEYKI, then on TRM R-263 to TRM VORTAC.

SW-3, 19 FEB 2026 to 19 MAR 2026

SW-3, 19 FEB 2026 to 19 MAR 2026